
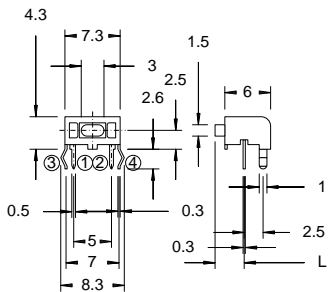
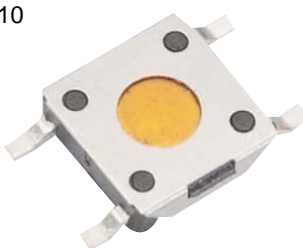
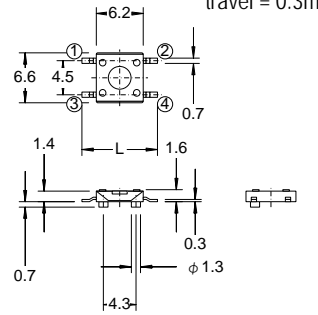
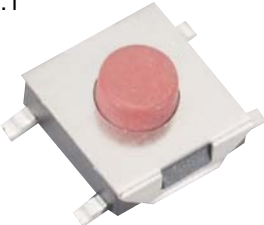
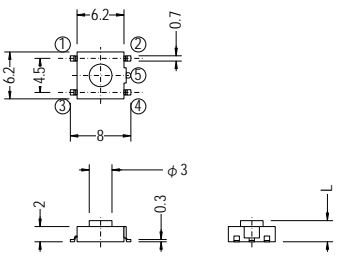
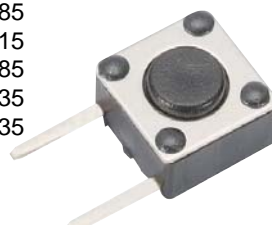
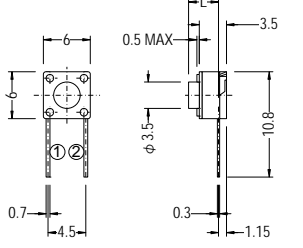

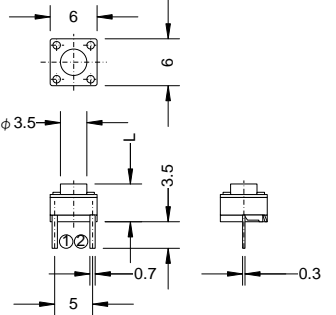

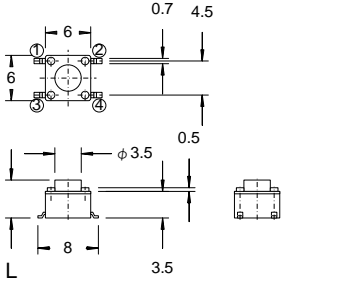

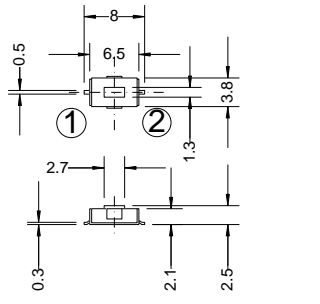

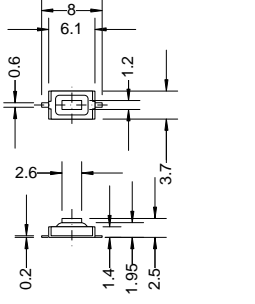



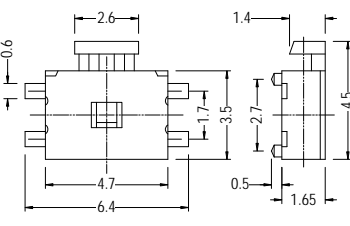
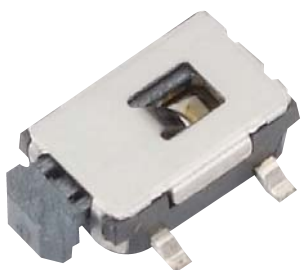
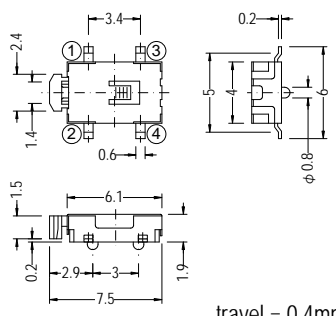


# TACT SWITCH

<p><b>TS-006L</b> L= 3.15 3.85 6.85</p> 	<p>travel = 0.25mm</p> 	<p><b>TS-007</b> L= 8 10</p> 	<p>travel = 0.3mm</p> 
<p><b>TS-008</b> L= 2.5 3.1</p> 	<p>travel = 0.3mm</p> 	<p><b>TS-009</b> L= 3.15 3.85 5.85 6.15 6.85 8.35 11.35</p> 	<p>travel = 0.25±0.1mm</p> 
<p><b>TS-009B</b> L= 4.3 5.0 7.0 7.3 8.0 9.5 12.5 13.0 13.5 17.0</p> 	<p>travel = 0.3mm</p> 	<p><b>TS-010</b> L= 4.3 5.0 7.0 7.3 8.0 9.5 12.5 13.0 13.5 17.0</p> 	<p>travel = 0.3mm</p> 
<p><b>TS-011</b></p> 		<p><b>TS-012B</b></p> 	
<p><b>TS-014</b> L= 1.6 4.3</p> 		<p><b>TS-016</b></p>  <p>travel = 0.2mm</p>	
<p><b>TS-017</b></p> 	<p>travel = 0.4mm</p> 	<p><b>TS-020</b></p> 